

IRM-MV SERIES

QUICKSTART GUIDE

GETTING STARTED WITH YOUR IRM-MV SERIES

What's Included

- MV display
- Enclosure with I/O Board
- 25 ft Cat6 Cable

Initial Power On



- Connect 24 VAC to I/O Board
- Connect Cat6 cable from I/O Board to MV
- From MV Home Screen:
ROOM >>ADMIN >>SETUP OVERVIEW
to customize display settings.

Defaults Enabled

Modes	Points
Occupied	1: DP 1
Unoccupied	4: Room Temp
	5: Room Humidity
	6: Mode

Refer to the manual for detailed configuration options.

INITIAL SETUP

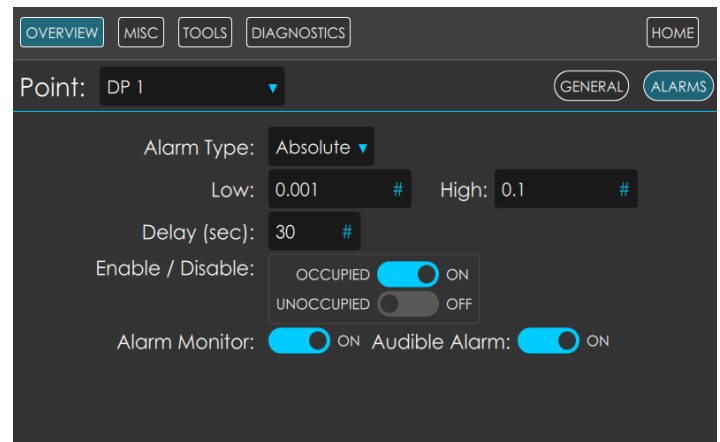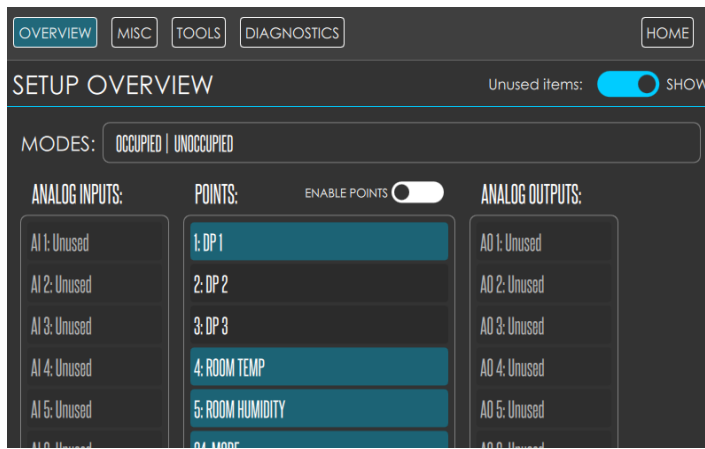

1 Add Additional Points

From **SETUP OVERVIEW**:

Toggle Unused Items to "Show".



Select a Point to enable and configure it.

2 Alarm Setup

From Point Setup (**ALARMS**):

Point alarms are disabled by default.

Configure point alarm for this room and display.

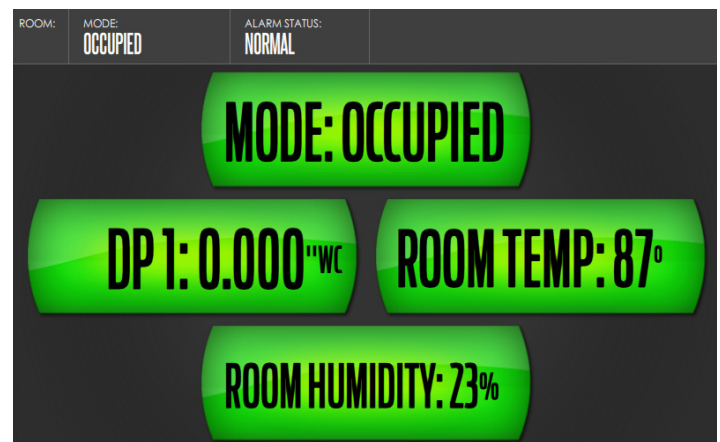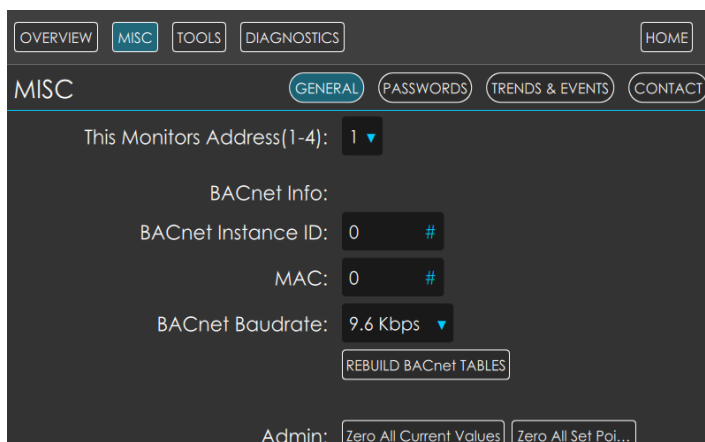

3 BACnet® Setup

From **MISC (GENERAL)**:

Scroll down to configure BACnet® info.

⚠ Press **REBUILD BACnet® TABLES** after any configuration changes are made from **SETUP OVERVIEW**.

4 Populate Current Value

After enabling a Point, the current value can be populated via a hardwired 0-10 VDC signal or BACnet®.